



PARTS LIST

- (1) TANK BODY
- (1) BILLET CLAMP
- (1) BALL VALVE
- (1) 90 DEGREE DRAIN
- (1) STAINLESS STEEL MOUNT BRACKET
- (1) 90 DEGREE BARBED FITTINGS
- (2) LENGTHS OF 3/8" TUBE
- (4) 1/4 X 20 BHCS X 5/8
- (1) 1/4 X 20 SHCS X 1
- (1) LENGTH OF 1/2" TUBE
- (2) 1/4-20 NUTS
- (1) STRAIGHT BARBED FITTING

For Technical Assistance, call Moroso's Tech Line
(203)-458-0542, 8:30am-5:00pm Eastern Time
MOROSO PERFORMANCE PRODUCTS, INC.

80 CARTER DRIVE
GUILFORD, CT 06437
www.moroso.com

REVA
10411

85488INST



Step 1: Assemble billet clamp and stainless mounting bracket using (1) 1/4 x 20 SHCS x 1 and (2) 1/4 x 20 x BHCS x 5/8

For Technical Assistance, call Moroso's Tech Line
(203)-458-0542, 8:30am-5:00pm Eastern Time
MOROSO PERFORMANCE PRODUCTS, INC.
80 CARTER DRIVE
GUILFORD, CT 06437
www.moroso.com



Step 2: Assemble Air Oil Separator as shown applying Teflon tape to all fittings



Step 3: Assemble billet clamp 1 1/4" down from top of Air Oil Separator

For Technical Assistance, call Moroso's Tech Line
(203)-458-0542, 8:30am-5:00pm Eastern Time
MOROSO PERFORMANCE PRODUCTS, INC.

80 CARTER DRIVE
GUILFORD, CT 06437
www.moroso.com



Step 4: Install 1/2 " hose over drain nipple

For Technical Assistance, call Moroso's Tech Line
(203)-458-0542, 8:30am-5:00pm Eastern Time
MOROSO PERFORMANCE PRODUCTS, INC.
80 CARTER DRIVE
GUILFORD, CT 06437
www.moroso.com




Step 5: Place Air Oil Separator against passenger side firewall as shown making sure drain hose and ball valve are orientated correctly



Step 6: Mark location of mounting bracket holes on firewall (2) places

For Technical Assistance, call Moroso's Tech Line
(203)-458-0542, 8:30am-5:00pm Eastern Time
MOROSO PERFORMANCE PRODUCTS, INC.

80 CARTER DRIVE
GUILFORD, CT 06437
www.moroso.com

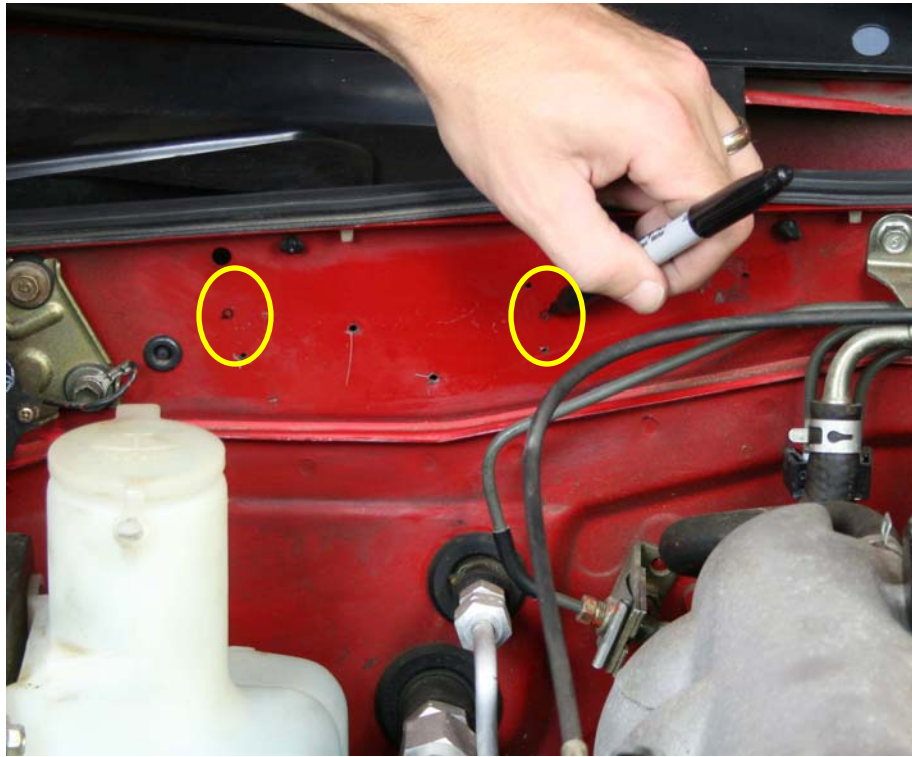

Step 6: Remove Air Oil Separator



Step 7: Center punch hole locations previously marked

For Technical Assistance, call Moroso's Tech Line
(203)-458-0542, 8:30am-5:00pm Eastern Time
MOROSO PERFORMANCE PRODUCTS, INC.

80 CARTER DRIVE
GUILFORD, CT 06437
www.moroso.com



Step 8: Remove (2) mounting bolts from windshield washer bottle



Step 9: Drill first 1/4" hole at marked location

For Technical Assistance, call Moroso's Tech Line
(203)-458-0542, 8:30am-5:00pm Eastern Time
MOROSO PERFORMANCE PRODUCTS, INC.

80 CARTER DRIVE
GUILFORD, CT 06437
www.moroso.com



Step 10: Drill Second 1/4" mounting hole at other location



Step 11: Reinstall windshield washer tank mounting bolts

For Technical Assistance, call Moroso's Tech Line
(203)-458-0542, 8:30am-5:00pm Eastern Time
MOROSO PERFORMANCE PRODUCTS, INC.

80 CARTER DRIVE
GUILFORD, CT 06437
www.moroso.com



Step 12: Insert (2) 1/4 X 20 BHCS X 5/8 thru stainless mounting bracket holes




Step 13: Install Air Oil Separator on firewall

For Technical Assistance, call Moroso's Tech Line
(203)-458-0542, 8:30am-5:00pm Eastern Time
MOROSO PERFORMANCE PRODUCTS, INC.
80 CARTER DRIVE
GUILFORD, CT 06437
www.moroso.com



Step 14: Install and tighten (2) 1/4 x 20 nuts on backside of firewall

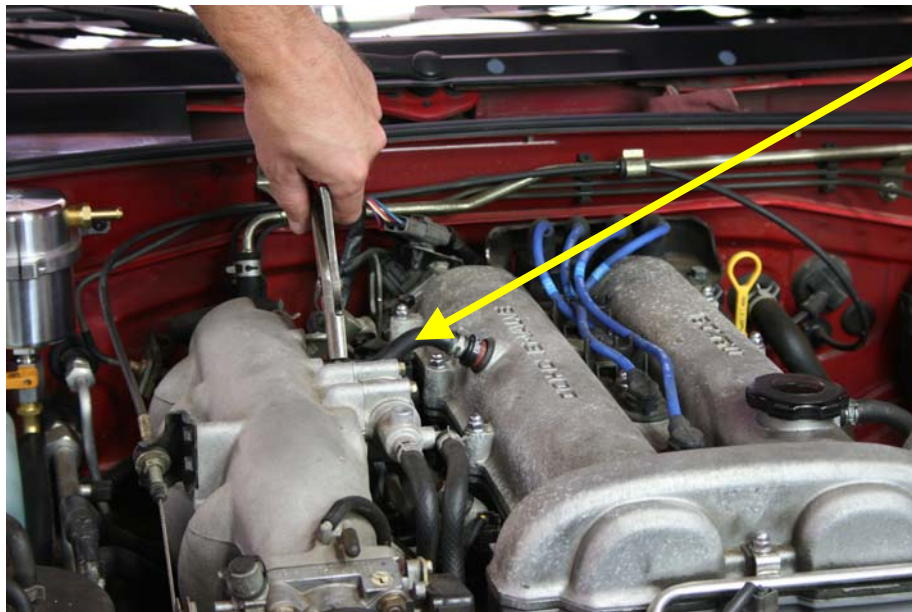

Step 15: Locate PCV line and remove both hose clamps

For Technical Assistance, call Moroso's Tech Line
(203)-458-0542, 8:30am-5:00pm Eastern Time
MOROSO PERFORMANCE PRODUCTS, INC.

80 CARTER DRIVE
GUILFORD, CT 06437
www.moroso.com



Step 16: Remove PCV line from vehicle, remove hose clamps for re-use

For Technical Assistance, call Moroso's Tech Line
(203)-458-0542, 8:30am-5:00pm Eastern Time
MOROSO PERFORMANCE PRODUCTS, INC.

80 CARTER DRIVE
GUILFORD, CT 06437
www.moroso.com



Step 17: Install (1) hose clamp on one end of 19" hose



Step 18: Install hose over PCV nipple

For Technical Assistance, call Moroso's Tech Line
(203)-458-0542, 8:30am-5:00pm Eastern Time
MOROSO PERFORMANCE PRODUCTS, INC.
80 CARTER DRIVE
GUILFORD, CT 06437
www.moroso.com



Step 19: Install hose clamp



Step 20: Install other end of hose to Air Oil Separator as shown

For Technical Assistance, call Moroso's Tech Line
(203)-458-0542, 8:30am-5:00pm Eastern Time
MOROSO PERFORMANCE PRODUCTS, INC.

80 CARTER DRIVE
GUILFORD, CT 06437
www.moroso.com



Step 21: Install other 19" hose on intake PCV port and install clamp



Step 22: Install other end of hose to Air Oil Separator as shown

For Technical Assistance, call Moroso's Tech Line
(203)-458-0542, 8:30am-5:00pm Eastern Time
MOROSO PERFORMANCE PRODUCTS, INC.

80 CARTER DRIVE
GUILFORD, CT 06437
www.moroso.com



Step 23: Before running vehicle be sure ball valve is in the closed position
Installation is complete

Draining of Air Oil Separator is needed; this will depend on driving conditions (i.e.) normal day to day driving check every 1,000 miles until a baseline is established. A good baseline is to drain the Air Oil Separator when it is about HALF full. This will vary with temperatures (cold winters vs. hot summers). For track usage Air Oil Separator will need to be drained after every outing.

There are several different methods to draining Air Oil Separator. The first and simplest method is to place a cup or MOROSO part # 65805 under drain elbow and open ball valve, once draining is complete close ball valve. The second method is to run a length of 1/2" hose from elbow to under carriage of vehicle and place drain pan under vehicle at this time open ball valve, when draining is complete close ball valve. This hose may also be permanently installed for future draining.

For Technical Assistance, call Moroso's Tech Line
(203)-458-0542, 8:30am-5:00pm Eastern Time
MOROSO PERFORMANCE PRODUCTS, INC.
80 CARTER DRIVE
GUILFORD, CT 06437
www.moroso.com