


K10220 Alternator and Power Steering Bracket for big-block Chevy


KWIK
Performance, Inc.
www.kwikperf.com

Copyright 2010
Kwik Performance, Inc.
All rights reserved


1. Attach front plate to driver side head and block.
Note: Leave all fasteners loose until alternator is installed.

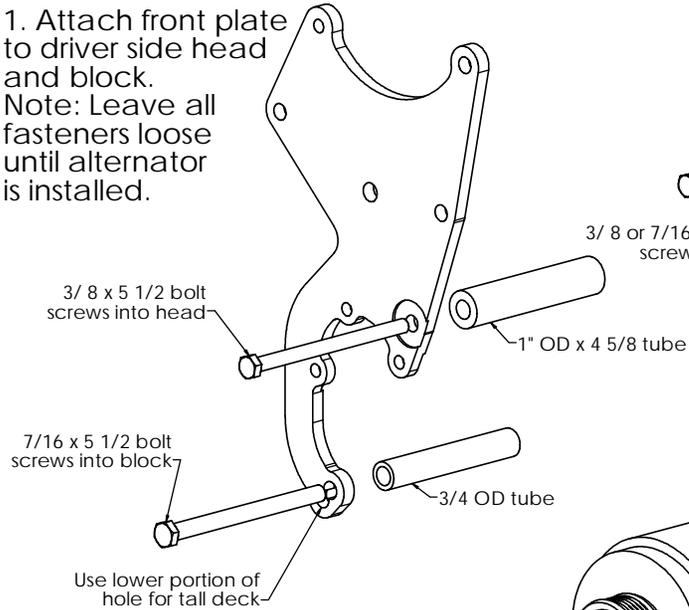


2. Attach rear plate to head

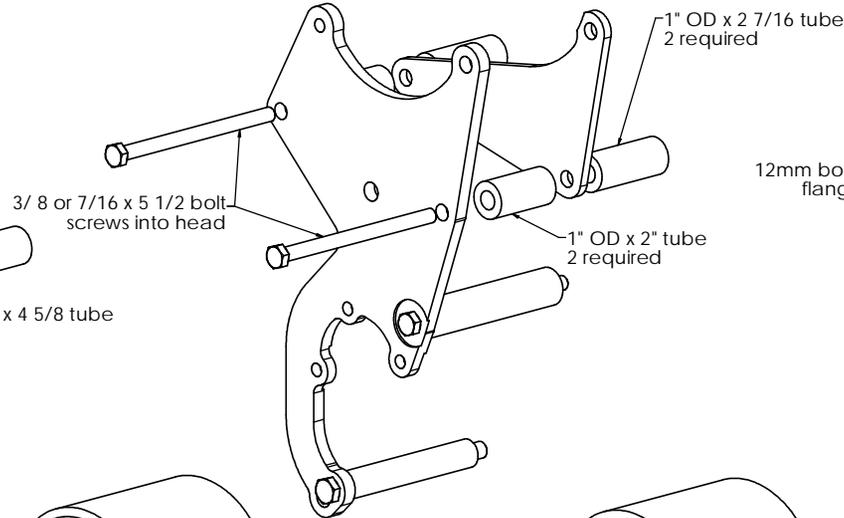


3. Attach idler pulley

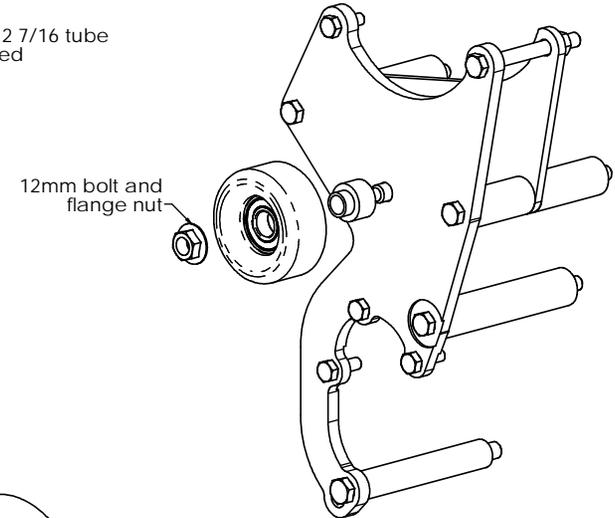

4. Attach alternator. Tighten 8mm bolt to 15 ft-lbs. Tighten other fasteners to 25 ft-lbs.

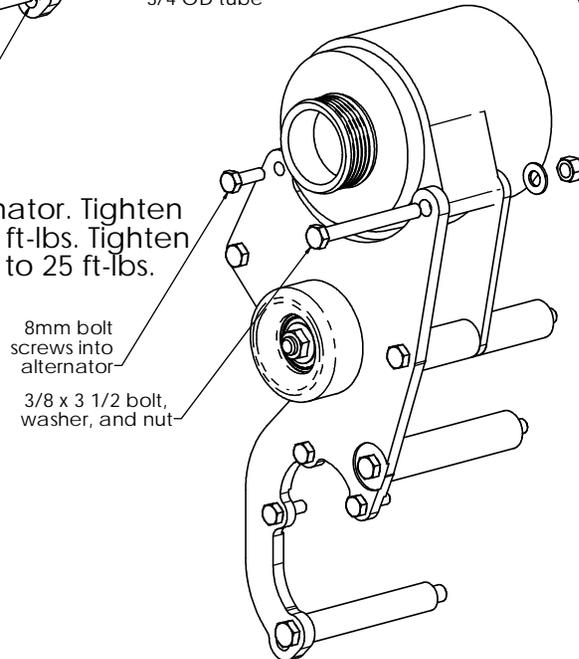

5. Attach pump

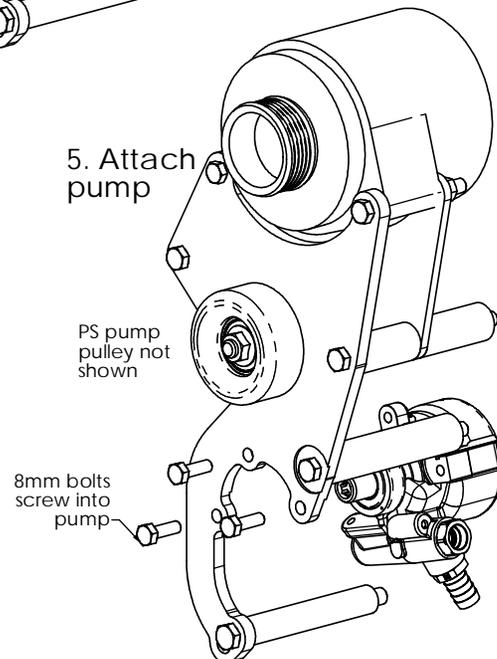

6. Install 6-rib belt (not included). Gates K060721 (72 5/8" long) is suggested for alternator/PS only system. K060725 is suggested for tall deck.

